



DepthQ HDs3D-1
HIGH DEFINITION 3D VIDEO PROJECTOR



Cleaning the Lens

- 1 Turn the projector off and unplug the power cord.
- 2 Slide open the lens cover, if the lens is covered.
- 3 Apply a non-abrasive camera lens cleaner to a soft, dry cloth.

Avoid using an excessive amount of cleaner, and don't apply the cleaner directly to the lens. Abrasive cleaners, solvents or other harsh chemicals might scratch the lens.
- 4 Lightly wipe the cleaning cloth over the lens in a circular motion. If you don't intend to use the projector immediately, slide the lens cap closed.

Clean the lens
with a soft dry cloth
and non-abrasive
cleaner

